esatto


Ready to cook up a storm? Let's get started using this little Quick Start Guide to begin cooking with your ECG905WS 90cm Gas Cooktop with Wo<u>k Burner!</u>



esatto

Get ready to use your ECG905WS 90cm Gas Cooktop with Wok Burner!

Your Cooktop

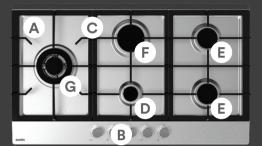

- A Stainless Steel hob
- **B** Knob Controls
- C Cast Iron Trivets
- D Auxiliary Burner
- E Semi-Rapid Burner
- F Rapid Burner
- G Wok Burner

For a complete guide on operating your cooktop, refer to user manual on pages 6–10.

Get in Touch

Need help? Contact our friendly support team via the contact details below. Phone / **1300 11 4357**

Email / support@residentiagroup.com.au

Product Details


Dimensions (W, D, H mm) / 860 × 510 × 90 Cut-out (A, B mm) / 830 × 490 Warranty / 2 Years

Register your Esatto product online for a free additional year esatto.house/warranty

How to ignite the burners

- 1 Press in the control knob of the burner that you wish to light and turn it anti-clockwise towards the ignition symbol.
- 2 If you keep the control knob depressed, the automatic ignition for the burner will operate.
- 3 Then adjust the knob between positions1 & 9 to your required flame intensity.
- 4 Once you have finished using the burner, ensure the knob is positioned upwards, with the indicator on the knob aligned to the Off knob control position.

Knob Controls

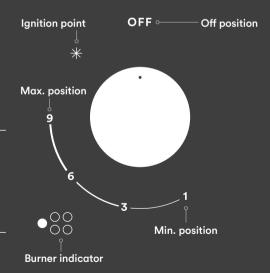

We're on Socials!

🖸 @esatto.house 🛛 🗧 @esatto.house

www.esatto.house