


**esatto**

This little Quick Start Guide is everything you need to get started so that your EFLW600 Front Load Washing Machine does all of your dirty work, literally!

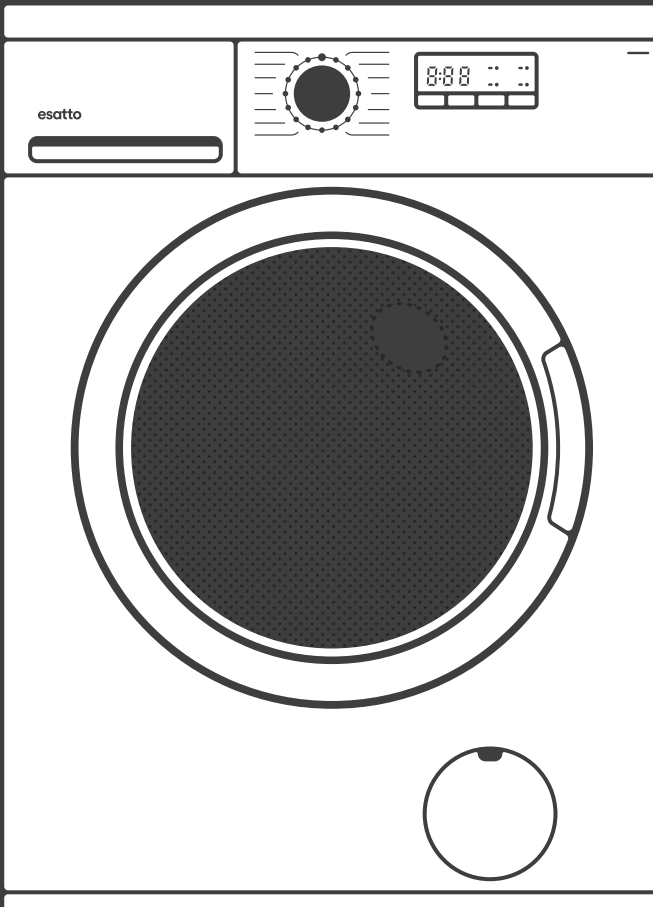

esatto

# Get ready to use your EFLW600 Front Load Washing Machine

## Installing your Washing Machine

Prior to installing your washing machine:

- Choose a solid and level surface that is away from direct sunlight.
- Remove the cardboard carton and styrofoam packaging.
- Lift the washing machine and remove the base packaging, ensuring the small triangle foam at the base is removed.
- Remove the tape securing the power supply cord and drain hose.
- Remove the inlet hose from the drum.
- Remove the transportation bolts.

Please refer to the user manual page 7–9 for more detailed installation instructions.

### Preparing the machine for first use

Before using the washing machine to clean your laundry. You must perform one complete cycle without any clothes inside using the following steps:

1. Connect the power source and water.
2. Insert a small amount of detergent into the detergent drawer and close it.
3. Turn the Program dial to select a program.
4. Press the “Start/Pause” button to begin the wash cycle.
5. After the machine has completed its full cycle, the machine is now ready for use.

## Product Details

Dimensions (W, D, H mm) / **595 x 400 x 850**

Capacity / **6kg**

Warranty / **2 Years**

Register your Esatto product online for a free additional year [esatto.house/warranty](http://esatto.house/warranty)

## Washing Programs

- **Cotton:** Suitable to wash durable, heat-resistant textiles made of cotton or linen.
- **Jeans:** Suitable for washing all types of denim.
- **Delicate:** This program has a gentle water flow. Suitable for delicate, washable textiles such as silk, satin, synthetic fibers or blended fabrics.
- **Cotton ECO:** A economical cotton cycle that uses lower temperatures and less water over an extended period of time.
- **Spin Only:** This program can be used after a wash to remove excess water. However, the clothing will not be fully dry.
- **Rinse & Spin:** Simply rinses the load and then spins it.
- **Hot 90°C:** This program should be reserved for brightening whites, removing stubborn stains on cotton or linen, killing bacteria on heavily soiled items or performing a routine drum clean maintenance wash on your machine.
- **Mix:** Suitable for mixed fabric loads that require a more intense cleaning cycle.
- **Rapid 45:** Suitable for washing lightly dirty clothes quickly.
- **Quick 15:** Suitable for light loads with light soiling of which you would like to be cleaned in a hurry.


Please refer to the user manual page 14 for more detailed Washing Program details.

## Get in Touch

Need help? Contact our friendly support team via the contact details below.

Phone / **1300 11 4357**

Email / [support@residentiagroup.com.au](mailto:support@residentiagroup.com.au)

 @esatto.house  @esatto.house

[www.esatto.house](http://www.esatto.house)