## esatto

This little Quick Start Guide is everything you need for your ETLW72B Top Load Washing Machine—say goodbye to those dirty clothes piling up!



### esatto

# Get ready to use your ETLW72B Top Load Washing Machine!

### **Installing Your Washing Machine**

- 1 Choose a solid and level surface that is away from direct sunlight.
- 2 Remove the cardboard carton and styrofoam packaging.
- 3 Lift the washing machine and remove the base packaging.
- 4 Remove the tape securing the power supply cord and drain hose.
- 5 Remove the inlet hose from the drum.

Please refer to the user manual page 7-9 for more detailed installation instructions.

#### Preparing the Machine

Before using the washing machine, you must perform one complete cycle without any clothes inside using the following steps:

- 1 Connect the power source and water.
- 2 Insert a small amount of detergent into the detergent drawer and close it.
- 3 Power on the machine and select a program and water level.
- 4 Press the 'Start/Pause' button to begin the wash cycle..
- 5 After the machine has completed its full cycle, the machine is now ready for use.

Please refer to the user manual page 10-15 for more detailed operation instructions.

#### **Product Details**

Dimensions (W, D, H mm) / 550 × 570 × 940 Energy Rating (MEPS/WELS) / 3 Stars / 3.5 Stars Weight (Net/Gross) / 38/42kg Warranty / 2 Years

additional year esatto.house/warranty

#### **Washing Programs**

Mix

Suitable to wash cotton, linen, flax. jute clothes

Normal (Standard)

to wash ramie cotton fabric. Wash for once,

Jeans

This cycle is suitable to wash Heavy

Soft

The tempo is soft, slow washing and spinning speed, to make the lightest wear and deformation.

Strong

is Stronger, so the washing effect is better.

Suitable to wash Heavy stained/wearable

Quick 15'

Please refer to the user manual page 12, 13 and 15 for more detailed washing program instructions.

#### **Get in Touch**

Phone / 1300 11 4357

Email / support@residentiagroup.com.au



www.esatto.house